



020969

TRACTORMETER

Part No.	Cross Ref. No
020969	908 472 M1



059121

TEMPERATURE GAUGE (MECH.)

Part No.	Cross Ref. No
059121	980 782 M93
059122	980 781 M95
059123	973 101 M95
050910	881 396 M91
059124	1431 303 M91



270910

TEMPERATURE GAUGE (ELECT.)

Part No.	Cross Ref. No
270910	1877 719 M92



260906



260907

FUEL GAUGE

Part No.	Cross Ref. No
260906	898 418 M1
260907	1877 717 M92
260926	894 844 M1



260926



220911

VOLTMETER

Part No.	Cross Ref. No
220911	1672 835 M2



110910

OIL PRESSURE GAUGE

Part No.	Cross Ref. No
110910	1853 097 M91/ 1850 377 M96



210910 (52mm)



210879 (42mm)

AMMETER

Part No.	Cross Ref. No
210910	-
210879	36047/827055M1



750941

TEMP. TRANSDUCER

Part No.	Cross Ref. No
750941	1877 731 M92



317050

FUEL SENDER

Part No.	Cross Ref. No
317050	670 717 M92



SPEEDOCABLE DRIVET

Part No.	Cross Ref. No
M17.933	882 539 M91
M17.982	829 487 M91



MF 399 Set

DUAL GAUGE

Part No.	Cross Ref. No
277195	3698 122 M91



ELECTRONIC RPM

Part No.	Cross Ref. No
080931	3698 119 M92



MF 398 Set

TRACTORMETER

Part No.	Cross Ref. No
020777	3698 116 M91



DUAL GAUGE

Part No.	Cross Ref. No
277176	-